




Capture Box Instructions For Landro® Play Analyzer

POWER / DRIVE CONNECTIONS: FRONT SIDE

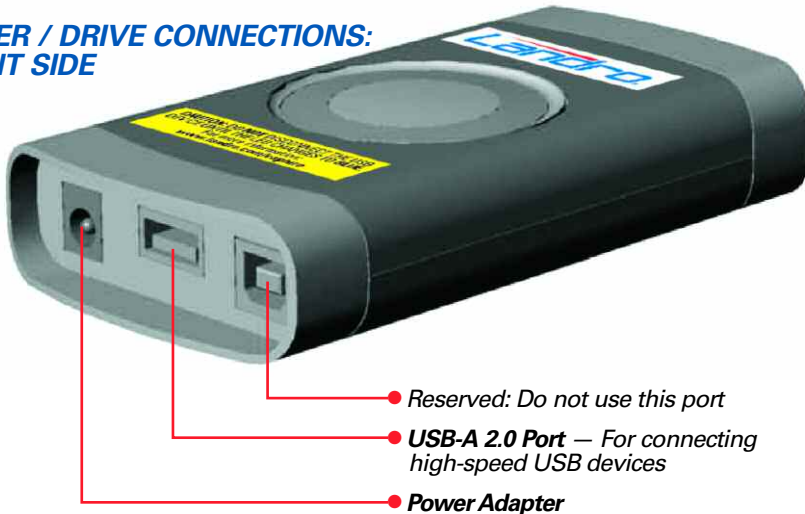

VIDEO/AUDIO CONNECTIONS: REAR SIDE

The video source connections are located on the rear side of the Capture Box.

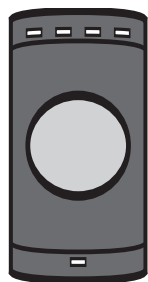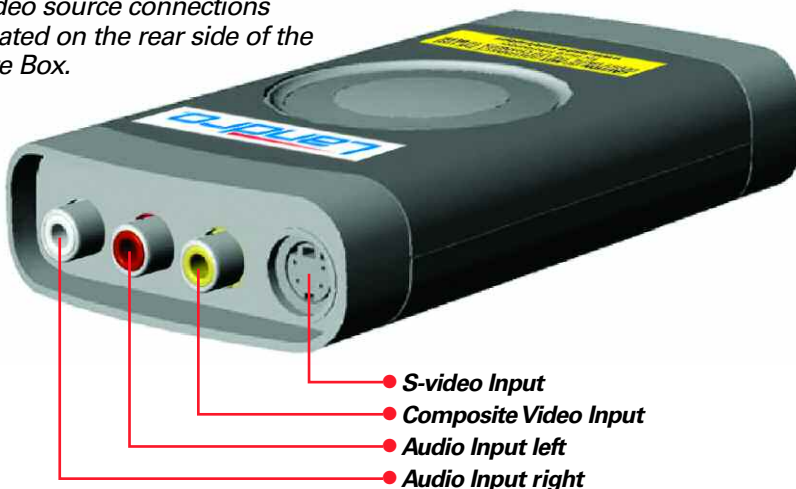

A/V INPUT LED COLOR CODE

- Detection / Recording — DO NOT DISCONNECT.
- A/V Signal Detected

USB PORT LED COLOR CODE

- USB Drive Detected
- Detection / Recording — DO NOT DISCONNECT.

OPERATION

- **MODE:** On / Off and capture quality
- **REC:** Start and stop recording.



After connecting the video source, USB drive and power adapter, complete the following steps.

STEP 1.

Press **MODE** once to turn on Capture Box.



STEP 2.

Before starting recording, wait until the A/V input LEDs and USB port LED change to **BLUE**.

STEP 3. (OPTIONAL)


Press **MODE** to CHANGE capture quality. (The default setting is **BETTER**. Landro RECOMMENDS using this setting.)

One LED = BASIC
Two LEDs = BETTER
Three LEDs = BEST



STEP 4.

Press **REC** once to START recording. A/V and USB LEDs change to **RED**.

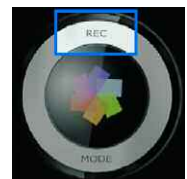

STEP 5.

When done, press **REC** again to STOP recording. DO NOT disconnect the USB drive until the USB port LED changes to **BLUE**.

STEP 6.

Press **MODE** button longer than 2 seconds to TURN OFF Capture Box.



Disconnect the USB drive from the capture box. Then plug the USB drive into your computer running Landro. In Landro, choose "Import Video" from the File menu.

WHEN USING ANY NEW USB DRIVE, ALWAYS TRY A TEST RECORDING TO CONFIRM VIDEO CAPTURE. ANY USB DRIVE MUST BE 2.0 HIGH-SPEED.